


\* DIMENSIONS MAY VARY IN ACTUAL INSTALLATION - FABRICATION CHANGES RESERVED - FIELD MEASUREMENT REQUIRED \*

# Turnstile Control Head

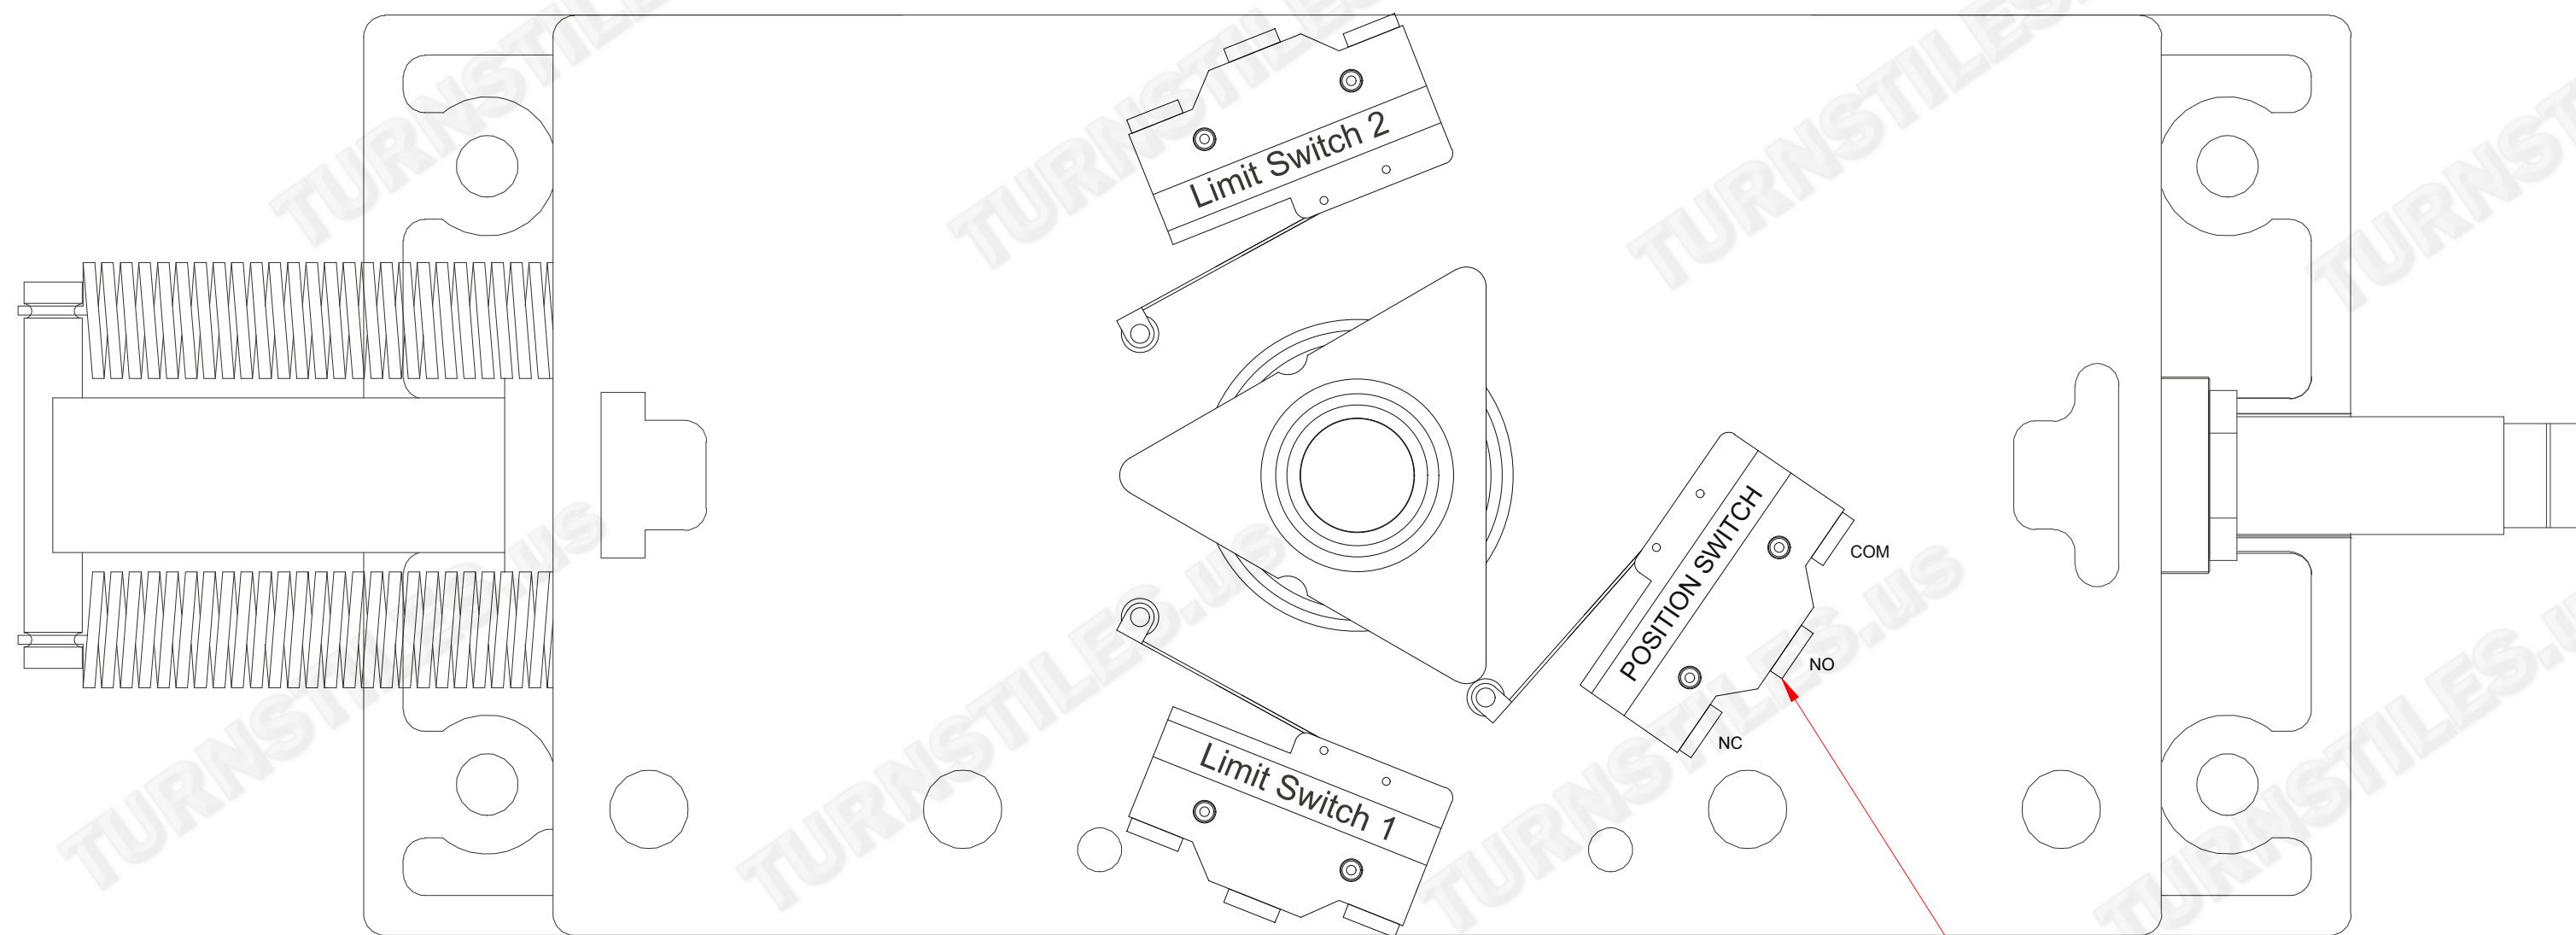

Connections:  
use COM and NO or NC and wire from  
the switch to access control or similar  
software as required, to indicate when  
the turnstile rotation has been completed

FIRST DRAWN	BY
10-26-21	CJC
REVISED	BY
COPYRIGHT © TURNSTILES.US Copyright © Turnstiles.us All rights reserved. Reproduction or translation of this work without the express written permission of TURNSTILES.us is unlawful and is an infringement of intellectual property belonging to TURNSTILES.us. All drawings and/or designs are restricted for use exclusively with a purchase, installation, and/or support from Turnstiles.us. Any other use of these materials is a violation of copyright law. Request for additional information should be addressed to the Legal Department, Turnstiles.us.	

  
[www.TURNSTILES.us](http://www.TURNSTILES.us)  
 Call 303 670 1099 \* Text 303 918 9787  
[patrick.mcallister@turnstiles.us](mailto:patrick.mcallister@turnstiles.us)

DEVICE LOCATION DETAIL	
Home Position Switch Or Turnstile Rotation Completion Sensor Diagram	
DWG	Home Position Switch Turnstile Rotation Sensor Device Location Detail
DATE	10-26-21
SHEET - 1 OF 1	

AUTHORIZED SIGNATURE: \_\_\_\_\_ DATE: \_\_\_ / \_\_\_ / \_\_\_